

The following fields are available in the **Software Upgrade** window:

<b>Field</b>	<b>Description</b>
<b>Upgrade From</b>	Select the type of server from which the image is to be downloaded.
<b>Address Type</b>	Select the IP Address type of the machine from which the image is to be downloaded.
<b>Server IP Address</b>	Enter the IP address of the machine from which the image is to be downloaded.
<b>SFTP User Name</b>	Enter the user name required for downloading the image from SFTP server.
<b>SFTP Password</b>	Enter the password required for downloading the image from SFTP server.
<b>File Name</b>	Enter the name of the image to be downloaded from the remote system.