

cnMatrix Storm-Control Parameters and Commands

Commands	Description	CLI Mode
<pre>storm-control { broadcast multicast dlf } level <rate- value></pre> <p>Available options:</p> <ul style="list-style-type: none"> • <code>broadcast</code> - Configures the storm-control for broadcast packets. • <code>multicast</code> - Configures the storm-control for both multicast and broadcast packets. • <code>dlf</code> - Configures the storm-control for unicast, multicast and broadcast packets. 	<p>Sets the storm control rate for broadcast, multicast-broadcast, DLF_multicast-broadcast and all packets.</p>	<p>Interface Configuration ((Physical Interface))</p>
<pre>show interfaces storm-control</pre>	<p>Displays the storm-control status for the interfaces.</p>	<p>Privileged EXEC</p>