

cnMatrix Rate-Limit-Output Parameters and Commands

Commands	Description	CLI Mode
<pre>rate-limit output [<rate-value>] [<burst-value>]</pre> <p>Available options:</p> <ul style="list-style-type: none"><code>rate-value</code> - Configures the maximum rate (in kbps) at which packets can be sent out through the interface.<code>burst-value</code> - Configures the burst size in kilobytes with which the rate is to be implemented.	Enables the rate limiting and burst size rate limiting by configuring the egress packet rate of an interface.	Interface Configuration (Physical Interface)